


Netafim USA\ARAD (Octave model) requirements and Division of Water Resources (DWR) requirements on installation.



1

Examples of proper installation

PROPER INSTALLATION
EXAMPLES

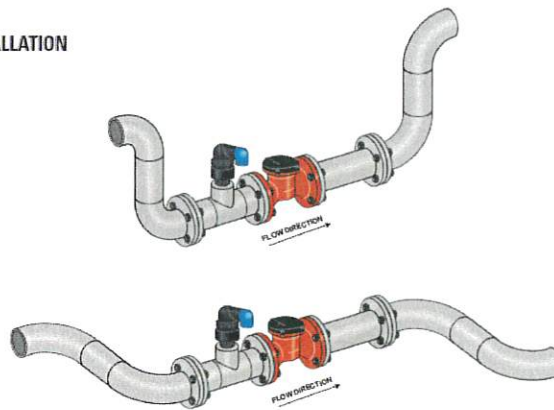


2

Air relief valve requirement

- To eliminate air in the pipeline and maintain accuracy, install Netafim branded Combination Air/Vacuum or Continuous Acting Air Vents right before the Octave water meter.

NOTE: Recommended air vent placement at least 18" before the Octave Water Meter.

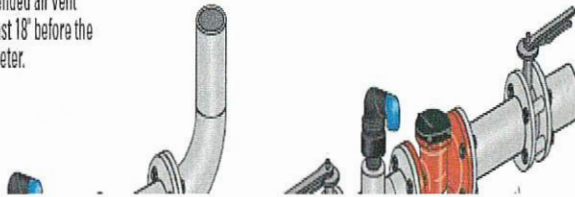

5

DWR REQUIREMENTS:

- CROSS-DRILLED FLANGED BOLTS. SEAL MUST BE PRESENT ON THE FLANGED BOLT TO INDICATE THE METER HAS NOT BEEN REMOVED
- DOES NOT REQUIRE STRAIGHTENING VANES
- AIR RELIEF MUST BE INSTALLED UPSTREAM OF THE METER

6

seal



9

Proper orientation of air vent installation.



10